KOVR

Measure your truck bed

Seven measurements help us confirm that your KOVR fits your truck before production starts. It takes about 10 minutes with a tape measure.

> Dimensions are nominal and for planning. We confirm fit before production. This is not an engineering drawing.

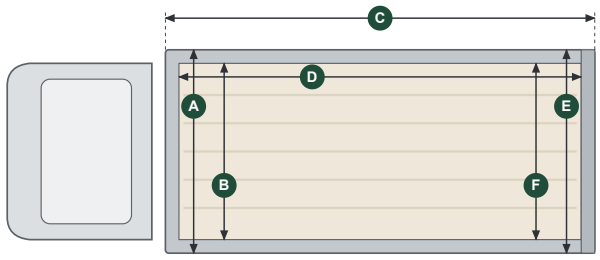

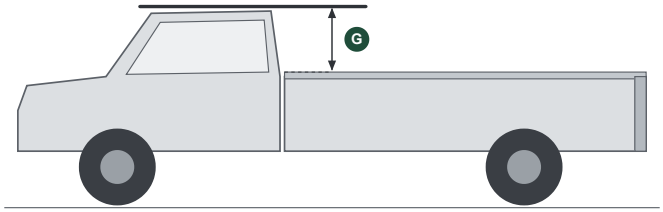

How to measure

1. Park on level ground. Empty the bed and close the tailgate.
2. Take every measurement on the top surface of the bed rails, unless the line says otherwise.
3. Hold the tape straight and tight. Read it at eye level.
4. Write each number in the table, in centimetres or inches. Do not round: give the nearest 0.5 cm or 1/4 in.

A **Outer width at the bulkhead**: from the outside edge of one rail to the outside edge of the other, at the front of the bed.

B **Inner width at the bulkhead**: between the inside edges of the two rails, at the front of the bed.

C **Outer length**: along the top of a side rail, from its front outer corner to the back edge of the closed tailgate.

D **Inner length**: along the top of the rail, from the inside face of the bulkhead to the inside face of the closed tailgate.

E **Outer width at the tailgate**: from the outside edge of one rail to the outside edge of the other, at the back of the bed.

F **Inner width at the tailgate**: between the inside edges of the two rails, at the back of the bed.

G **Height**: straight up from the rail top at the bulkhead to the highest point of the cab roof, measured to a level straightedge laid across the roof.

Your measurements

LETTER	WHAT TO MEASURE	YOUR MEASUREMENT	UNIT
A	Outer width at the bulkhead		☐ cm ☐ in
B	Inner width at the bulkhead		☐ cm ☐ in
C	Outer length		☐ cm ☐ in
D	Inner length		☐ cm ☐ in
E	Outer width at the tailgate		☐ cm ☐ in
F	Inner width at the tailgate		☐ cm ☐ in
G	Height		☐ cm ☐ in

About your truck

Make _____

Model _____

Year _____

Generation, if you know it (for example DS or DT for the Ram 1500) _____

Cab type (regular, extended, crew) _____

Tailgate type (standard, multi-function, other) _____

Photos and videos (optional, but they help)

- A short video or a photo for each measurement, with the tape visible at both ends.
- A photo of the empty bed, taken from above.
- A side view of each rail, the tailgate and the bulkhead.

How to send them

Reply to your quote email, or send a file link to info@kovrcampers.com. Include your quote reference (for example Q-2026-0000).

> Dimensions are nominal and for planning. We confirm fit before production. This is not an engineering drawing.